

ShockPRO™

Procedure to change a ShockPRO™ hub



1. Remove 4 bolts.
Then lift the disc off.



2. Remove center bolt.



3. Remove center bolt and washers.



4. Remove hardened splined washer and ShockPRO™ hub.



5. Remove filings.



6. Replace the ShockPRO™ hub,
so that when the disc is installed,
it is positioned 90°
relative to the
next disc.




7. Install the hardened splined washer.



8. Install the washer and center bolt.



9. Torque the center bolt to 135 ft-lbs.

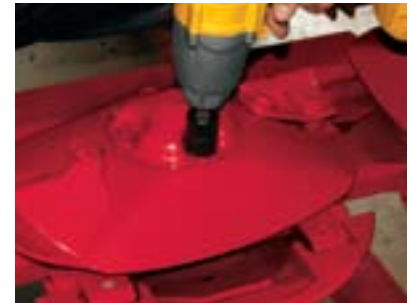

10. Reinstall disc and confirm timing.